

## BMW TRUNK EXTENSION CABLE REPAIR




**Step 1.** If connected disconnect 3-pin and 6-pin connector from BMW CD-changer plugs.




**Step 2.** Locate tab on top side of 6-pin connector on side nearest to the black ground wire.


**Step 3.** Pop plastic locking-tab open.

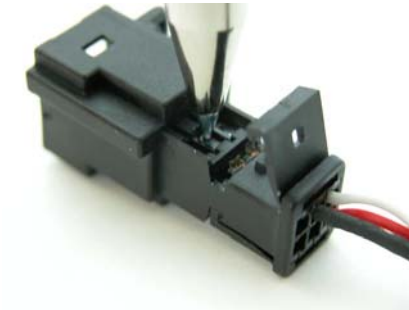

**Step 4.** Use ball point pen or other similar tool to press down on locking metal tab that corresponds to the black ground wire.

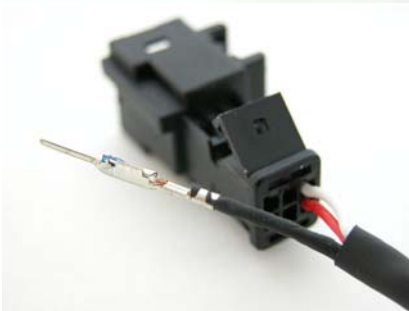

**Step 5.** Pull out black wire from the back of the 6-pin connector. Wire should easily pull out. If any force is needed to pull wire, please repeat step 4.

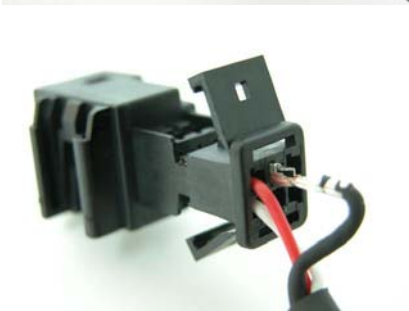

**Step 6.** Lift the other plastic tab open as done in step 3.

**Step 7.** Reinsert metal pin into position #2, located next to the red wire.



**Step 8.** Make sure pin is fully inserted and close both tabs until they pop closed.

Compare modified cable to the cable pictured and reinstall in vehicle.